


# Engine Control Module (ECM) I/O Signal

ENGINE (DIAGNOSTICS)

## 5. Engine Control Module (ECM) I/O Signal

### A: ELECTRICAL SPECIFICATION

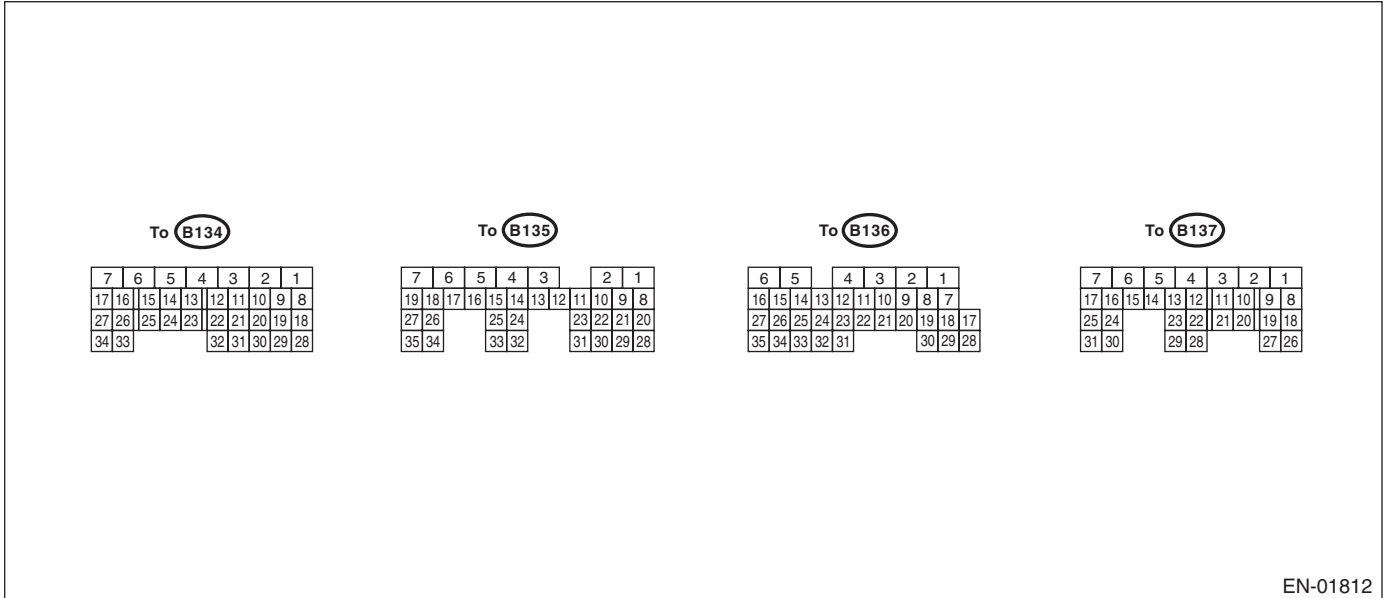

EN-01812

Content		Connector No.	Terminal No.	Signal (V)		Note
				Ignition SW ON (Engine OFF)	Engine ON (Idling)	
Crankshaft position sensor	Signal (+)	B135	10	0	-7 — +7	Sensor output waveform
	Signal (-)	B135	22	0	0	—
	Shield	B135	31	0	0	—
Rear oxygen sensor	Signal	B137	25	0	0 — 0.9	—
	Shield	B137	31	0	0	—
	GND (sensor)	B136	35	0	0	—
Front oxygen (A/F) sensor heater	Signal 1	B134	3	0 — 1.0	—	Sensor output waveform
	Signal 2	B134	2	0 — 1.0	—	Sensor output waveform
Rear oxygen sensor heater signal		B135	2	0 — 1.0	—	Sensor output waveform
Engine coolant temperature sensor	Signal	B136	14	1.0 — 1.4	1.0 — 1.4	After warm-up the engine.
	GND (sensor)	B136	35	0	0	After warm-up the engine.
Vehicle speed signal		B135	26	0 or 5	0 or 5	"5" and "0" are repeatedly displayed when vehicle is driven.
Mass air flow sensor	Signal	B136	23	—	0.3 — 4.5	—
	Shield	B136	32	0	0	—
	GND	B136	31	0	0	—
Intake air temperature sensor signal		B136	13	0.3 — 4.6	0.3 — 4.6	—
Tumble generator valve position sensor RH	Signal	B136	27	Fully closed: 3.8 — 4.9 Fully opened: 0.2 — 0.9		—
	Power supply	B136	16	5	5	—
	GND (sensor)	B136	35	0	0	—

# Engine Control Module (ECM) I/O Signal

ENGINE (DIAGNOSTICS)

Content		Connector No.	Terminal No.	Signal (V)		Note
				Ignition SW ON (Engine OFF)	Engine ON (Idling)	
Tumble generator valve position sensor LH	Signal	B136	26	Fully closed: 3.8 — 4.9 Fully opened: 0.2 — 0.9		—
	Power supply	B136	16	5	5	—
	GND (sensor)	B136	35	0	0	—
Tumble generator valve RH (open)		B134	9	0 or 10 — 13	0 or 13 — 14	Sensor output waveform
Tumble generator valve RH (close)		B134	8	0 or 10 — 13	0 or 13 — 14	Sensor output waveform
Tumble generator valve LH (open)		B134	11	0 or 10 — 13	0 or 13 — 14	Sensor output waveform
Tumble generator valve LH (close)		B134	10	0 or 10 — 13	0 or 13 — 14	Sensor output waveform
Wastegate control solenoid valve		B134	32	0 or 10 — 13	0 or 13 — 14	Sensor output waveform
Starter switch		B137	8	0	0	Cranking: 8 — 14
A/C switch		B137	17	ON: 10 — 13 OFF: 0	ON: 13 — 14 OFF: 0	—
Ignition switch		B137	14	10 — 13	13 — 14	—
Neutral position switch		B137	9	ON: 10 — 13 OFF: 0	ON: 13 — 14 OFF: 0	—
Test mode connector		B137	15	5	5	When connected: 0
Knock sensor	Signal	B136	25	2.8	2.8	—
	Shield	B136	33	0	0	—
Back-up power supply		B135	19	10 — 13	13 — 14	Ignition switch "OFF": 10 — 13
Control unit power supply		B135	5	10 — 13	13 — 14	—
		B135	6	10 — 13	13 — 14	—
Sensor power supply		B136	16	5	5	—
Ignition control	#1	B135	18	0	13 — 14	Waveform
	#2	B135	17	0	13 — 14	Waveform
	#3	B135	16	0	13 — 14	Waveform
	#4	B135	16	0	13 — 14	Waveform
Fuel injector	#1	B136	6	10 — 13	1 — 14	Waveform
	#2	B136	5	10 — 13	1 — 14	Waveform
	#3	B136	4	10 — 13	1 — 14	Waveform
	#4	B136	3	10 — 13	1 — 14	Waveform
Fuel pump control unit	Signal 1	B135	27	0 or 5	0 or 5	Sensor output waveform
	Signal 2	B137	28	10 — 13	13 — 14	—
A/C relay control		B135	33	ON: 0.5 or less OFF: 10 — 13	ON: 0.5 or less OFF: 13 — 14	—
Radiator fan relay 1 control		B135	25	ON: 0.5 or less OFF: 10 — 13	ON: 0.5 or less OFF: 13 — 14	—
Radiator fan relay 2 control		B135	24	ON: 0.5 or less OFF: 10 — 13	ON: 0.5 or less OFF: 13 — 14	Model with A/C only
Malfunction indicator lamp		B134	17	—	—	Light "ON": 1 or less Light "OFF": 10 — 14
Engine speed output		B134	23	—	0 — 13, or more	Waveform
Purge control solenoid valve		B134	14	ON: 1 or less OFF: 10 — 13	ON: 1 or less OFF: 13 — 14	Sensor output waveform

## Engine Control Module (ECM) I/O Signal

### ENGINE (DIAGNOSTICS)

Content		Connector No.	Terminal No.	Signal (V)		Note
				Ignition SW ON (Engine OFF)	Engine ON (Idling)	
Manifold absolute pressure sensor	Signal	B136	22	1.7 — 2.4	1.1 — 1.6	—
	Power supply	B136	16	5	5	
	GND (sensor)	B136	35	0	0	
Fuel tank pressure sensor	Signal	B136	21	2.3 — 2.7	2.3 — 2.7	The valve operates when fuel filler cap is removed and reinstalled.
	GND (sensor)	B136	35	0	0	—
Fuel tank pressure control solenoid valve		B134	12	ON: 1 or less OFF: 10 — 13	ON: 1 or less OFF: 13 — 14	—
Drain valve		B134	13	ON: 1 or less OFF: 10 — 13	ON: 1 or less OFF: 13 — 14	—
Fuel tank sensor control valve		B134	24	ON: 1 or less OFF: 10 — 13	ON: 1 or less OFF: 13 — 14	—
Fuel level sensor		B136	20	0.12 — 4.75	0.12 — 4.75	—
Fuel temperature sensor signal		B136	12	2.5 — 3.8	2.5 — 3.8	Ambient temperature: 25°C (75°F)
Blow-by leak diagnosis signal		B137	24	0	0	When disconnection (malfunction): 5
Small light switch		B137	12	ON: 0 OFF: 10 — 13	ON: 0 OFF: 13 — 14	—
Blower fan switch		B137	13	ON: 0 OFF: 10 — 13	ON: 0 OFF: 13 — 14	—
Rear defogger switch		B137	11	ON: 0 OFF: 10 — 13	ON: 0 OFF: 13 — 14	—
Power steering oil pressure switch		B137	10	10 — 13	ON: 0 OFF: 13 — 14	—
Front oxygen (A/F) sensor signal (+)		B134	33	2.8 — 3.2	2.8 — 3.2	—
Front oxygen (A/F) sensor signal (-)		B134	26	2.4 — 2.7	2.4 — 2.7	—
Front oxygen (A/F) sensor shield		B134	25	0	0	—
SSM/GST communication line		B137	20	Less than 1 ←→ More than 4	Less than 1 ←→ More than 4	—
GND (injectors)		B137	7	0	0	—
GND (ignition system)		B135	12	0	0	—
GND (power supply)		B135	4	0	0	—
		B135	1	0	0	—
GND (control systems)		B137	1	0	0	—
		B137	2	0	0	—
GND (front oxygen (A/F) sensor heater 1)		B134	7	0	0	—
GND (front oxygen (A/F) sensor heater 2)		B134	6	0	0	—
Camshaft position sensor (LH)		B135	8	0 — 0.9	ON: 0 OFF: 4.7 — 5.3	Sensor output waveform
Camshaft position sensor (RH)		B135	9	0 — 0.9	ON: 0 OFF: 4.7 — 5.3	Sensor output waveform

# Engine Control Module (ECM) I/O Signal

ENGINE (DIAGNOSTICS)

Content		Con- nector No.	Termi- nal No.	Signal (V)		Note
				Ignition SW ON (Engine OFF)	Engine ON (Idling)	
Electronic throttle con- trol	Main	B136	18	0.64 — 0.72 Fully opened: 3.96	0.64 — 0.72 (After engine warm-up)	Fully closed: 0.6 Fully opened: 3.96
	Sub	B136	29	1.51 — 1.58 Fully opened: 4.17	1.51 — 1.58 (After engine warm-up)	Fully closed: 1.48 Fully opened: 4.17
	Power sup- ply	B136	16	5	5	—
	GND (sen- sor)	B137	3	0	0	—
Electronic throttle control motor (+)		B137	5	Duty waveform	Duty waveform	Driving frequency: 500 Hz
Electronic throttle control motor (-)		B137	4	Duty waveform	Duty waveform	Driving frequency: 500 Hz
Electronic throttle control motor power supply		B137	6	10 — 13	13 — 14	—
Electronic throttle control motor relay		B135	35	ON: 010 OFF: — 13	ON: 0 OFF: 13 — 14	When ignition switch is ON: ON
Oil flow control solenoid valve (LH)	Signal (+)	B134	19	ON: 10 — 13 OFF: 0	ON: 13 — 14 OFF: 0	—
	Signal (-)	B134	29	0	0	—
Oil flow control solenoid valve (RH)	Signal (+)	B134	18	ON: 10 — 13 OFF: 0	ON: 13 — 14 OFF: 0	—
	Signal (-)	B134	28	0	0	—
Accelerator pedal position sensor	Main	B136	17	Fully closed: 1 Fully opened: 3.5	Fully closed: 1 Fully opened: 3.5	—
	Power sup- ply	B136	15	5	5	—
	GND (sen- sor)	B136	34	0	0	—
	Sub	B136	28	Fully closed: 1 Fully opened: 3.5	Fully closed: 1 Fully opened: 3.5	—
Cruise control set light		B134	16	ON: 0 OFF: 10 — 13	ON: 0 OFF: 13 — 14	—
Main light		B134	15	ON: 0 OFF: 10 — 13	ON: 0 OFF: 13 — 14	—
Clutch switch		B134	1	When clutch pedal is depressed: 0 When clutch pedal is released: 10 — 13	When clutch pedal is depressed: 0 When clutch pedal is released: 13 — 14	—
SET/COAST switch		B136	11	ON: 10 — 13 OFF: 0	ON: 13 — 14 OFF: 0	—
Brake switch 1		B136	9	When brake pedal is depressed: 0 When brake pedal is released: 10 — 13	When brake pedal is depressed: 0 When brake pedal is released: 13 — 14	—
Brake switch 2		B136	8	When brake pedal is depressed: 10 — 13 When brake pedal is released: 0	When brake pedal is depressed: 13 — 14 When brake pedal is released: 0	—
RESUME/ACCEL switch		B136	10	ON: 10 — 13 OFF: 0	ON: 13 — 14 OFF: 0	—
Main switch		B136	7	ON: 10 — 13 OFF: 0	ON: 13 — 14 OFF: 0	—